

C Toggle operation mode

Ne-St has the following two operation modes.

Manual mode

In standby "blue LED lights up or blinks" & "Orange is on or off"

The same operation as the SET button mounted on the XARVIS main unit is used to change the setting of XARVIS using the ENT button of this unit.

Professional mode

At standby "red LED lights up or blinks"


Mode that changes the setting of XARVIS by transferring the setting data stored in this machine to XARVIS.

Toggle operation mode

① Press and hold the ENT button in standby mode (digital window is off) 2 seconds).

② Every time you press and hold, the operation mode alternates.

The operation mode is saved even if Ne-St is turned off. The unit will start in the same mode that it was when previously turned off.

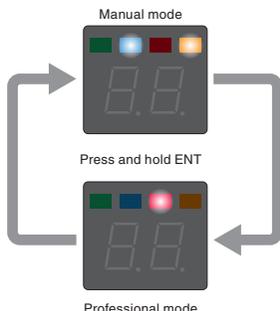

D Setting change - Manual mode

With the operation mode switched to the manual mode, the same operation as the SET button built in the XARVIS unit is performed, and the setting of XARVIS is changed using the ENT button of this unit. Please change the setting by the method described on page 10 of XARVIS Owner's Manual (bottom line) ~ P.20.

* In the XARVIS instruction manual, please replace "ESC mode" with "manual mode" and "SET button" with "ENT button".

E Setting change - Professional mode ①

Transfer setting data to XARVIS

① Switch the operation mode to professional mode.



② SELECT button ▲ ▼ Press any key to display the setting data number in the digital window.



* Double-click the ENT button to return to the standby state (digital window goes off).

③ Select the setting data number to be sent to XARVIS with the select button ▲ ▼. If you press and hold the select button ▲ ▼, the setting data number will increase or decrease successively while pressing the button.



④ Press and hold the ENT button for a long time to start sending the selected setting data. "SE" is displayed during data transmission and flashes so that the four indicator LEDs flow from left to right.

When the data link is successful, the setting data number flashes, and when it fails the letter "Er" flashes.

⑤ Press the ENT button to return to the standby state. With data link success, XARVIS setting change is complete.

Please remove Ne-St from XARVIS and enjoy your driving.

F Setting change - Professional mode ②

Confirm the setting data number transferred to XARVIS

① Switch the operation mode to professional mode.



② When the digital window is off, press and hold the select button ▲ to start the preview. "Pr" is displayed during preview, and flashes so that the four indicator LEDs flow from right to left.



③ When the preview is completed, the following characters are displayed in the digital window.

- Data matching the built-in setting data exists ⇒ Data number flashes
- No data matching the built-in setting data ⇒ "no" flashes
- Preview failure ⇒ "Er" flashes

④ Press the ENT button to return to the standby state.

G How to check the contents of setting data

① Switch the operation mode to professional mode.



② When the digital window is off and the select button ▼ is held down, the numerical value (current version) is displayed.



Since we posted the setting data details of each version on our website, please confirm the content there.

③ Press the ENT button to return to the standby state.

H About updating Ne-St

We will distribute the latest setting data on our website from time to time, so please update your Ne-St setting data after using your Windows PC and an optional update device kit (OP-87052 ¥ 2,800 + tax) please. For further information on how to update the setting data please check our website.

